GL1000 (U.K.•EUROPEAN TYPE)

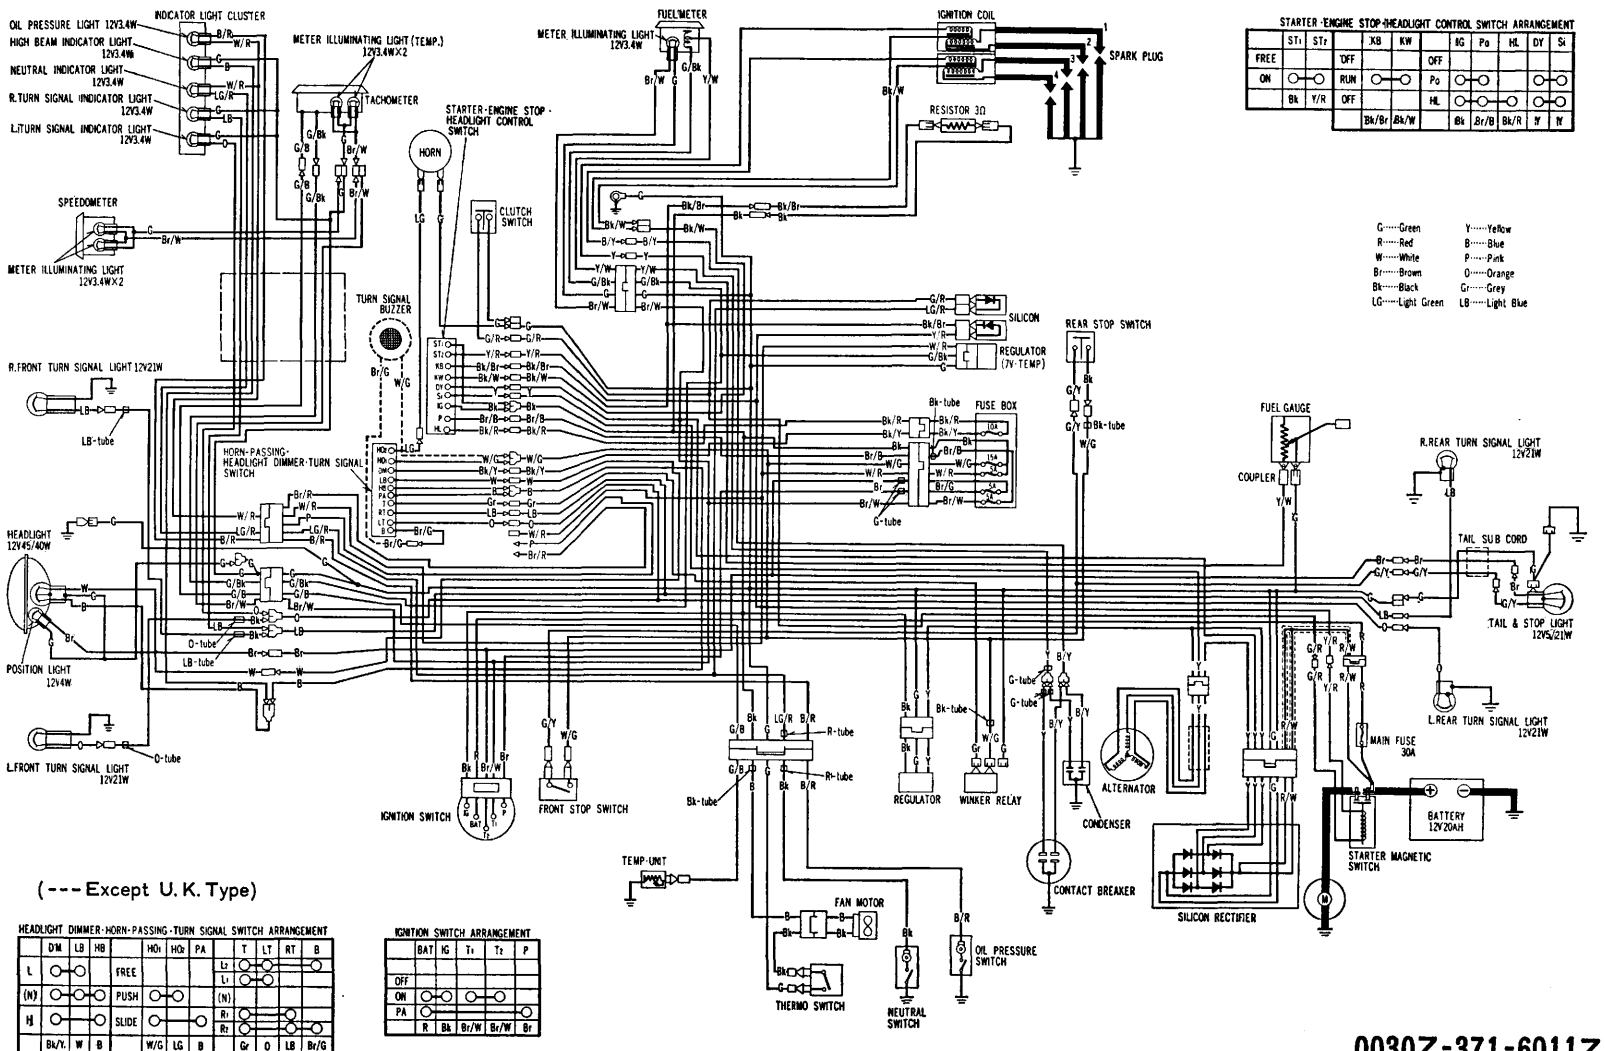

STARTER-ENGINE STOP-HEADLIGHT CONTROL SWITCH ARRANGEMENT

	ST1	ST2		XB	KW		IG	Po	HL	DY	St
FREE			OFF			OFF					
ON	○	○	RUN			Po					
	Bk	Y/R	OFF			HL	○	○	○	○	○
				Bk/Br	Bk/W		Bk	Br/B	Bk/R	W	W

G·····Green
R·····Red
W·····White
Br·····Brown
Bk·····Black
LG·····Light Green
Y·····Yellow
B·····Blue
P·····Pink
O·····Orange
Gr·····Grey
LB·····Light Blue

(---Except U.K. Type)

HEADLIGHT DIMMER-HORN-PASSING-TURN SIGNAL SWITCH ARRANGEMENT

	DM	LB	HB		HO1	HO2	PA		T	LT	RT	B
L	○			FREE				L2	○			
								L1				
(N)	○		○	PUSH	○			(N)				
H	○		○	SLIDE	○		○	R1		○	○	○
								R2	○			○
	Bk/Y	W	B		W/G	LG	B		Gr	O	LB	Br/G

IGNITION SWITCH ARRANGEMENT

	BAT	IG	T1	T2	P
OFF					
ON	○	○		○	
PA	○				○
	R	Bk	Br/W	Br/W	Br

0030Z-371-6011Z