

### Installation:

1. Install the side collars into the left and right side wheel hub.

Position the front wheel between the fork legs and insert the front axle shaft from the left side, through the left fork leg and wheel hub.

2. Align the index line (10) of the front axle shaft with the surface (11) of fork leg.

3. Tighten the front axle bolt to the specified torque:

59 N·m (6.0 kgf·m , 43 lbf·ft)

4. Tighten the axle pinch bolts on the left fork leg to the specified torque:


22 N·m (2.2 kgf·m , 16 lbf·ft)

5. Install the right and left caliper assembly to the fork legs, tighten the fixing bolts and socket bolts to the specified torque:

31 N·m (3.2 kgf·m , 23 lbf·ft)

To avoid damaging the brake pads while installing the caliper assemblies, carefully fit both brake discs (12) between the pads.

6. Operate the front brake and pump the fork several times. Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or the wheel does not rotate freely.

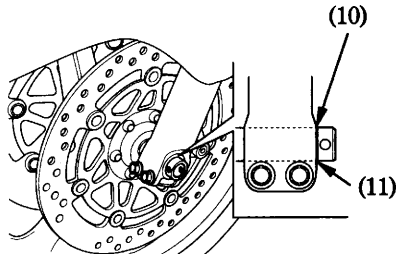

(10) Index line

(11) Surface of fork leg