

### Installation:

1. Position the front wheel between the fork legs and insert the axle from the left side, through the left fork leg and wheel hub.
2. Align the index line ( 6 ) of the axle shaft with the surface ( 7 ) of fork leg.
3. Tighten the axle pinch bolts on the left fork leg to the specified torque:  
22 N·m (2.2 kgf·m , 16 lbf·ft)
4. Tighten the axle bolt to the specified torque.

Front axle torque :

59 N·m (6.0 kgf·m , 43 lbf·ft)


5. Install the right and left caliper assemblies to the fork legs and tighten the fixing bolts to the specified torque:  
30 N·m (3.1 kgf·m , 22 lbf·ft)

To avoid damaging the brake pads while installing the caliper assemblies, carefully fit both brake discs between the pads.

6. Operate the front brake and pump the fork several times.

Check for free wheel rotation after the brake lever is released. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

7. Tighten the axle pinch bolts on the right fork leg to specified torque:  
22 N·m (2.2 kgf·m , 16 lbf·ft)

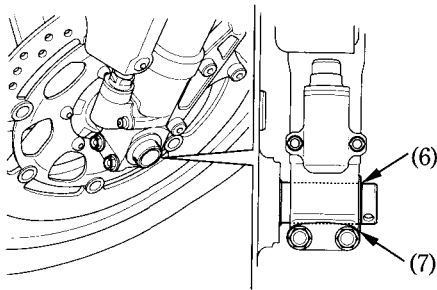

- (6) Index line  
(7) Surface